

LITETRONICS®

Plug-in Bluetooth Control Module with IR (BCM01)

For use with:

- Light Panel (PT*S)
- Light Panel Retrofit (PRT*S)
- Strip Fixture (SFS*)
- Pluggable Sensor SC010



Installation Instructions

The BCM01 plug-in PIR sensor enables wireless control of fixtures, or groups of fixtures, through the LiteSmart mobile app.



LiteSmart® offers complete control over your fixtures; includes occupancy sensing, daylight harvesting, dimming, grouping, time schedule programming and scene creation.

LiteSmart is available in the app store for download to either IOS or Android devices.



These Bluetooth control and switches offer control of your fixtures wirelessly.

Bluetooth Control and Switches – Available for purchase from Litetronics under parts # SCR054, BCS03 or BCS05.

* A detailed user guide for LiteSmart can be viewed or downloaded from www.litetronics.com/resources/downloads/litesmart-mobile-app-user-guide


PANEL INSTALLATION - PT*S

Installing the BCM01 sensor is quick and simple.

- Before installation, ***always turn off the power from main circuit first!***


1. To remove sensor cover, use a flat screw driver at sensor COVER notch and gently pull out cover from frame (Figure 1).

Figure 1

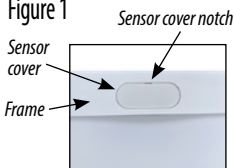

2. Pull out wires with quick connector from frame and connect sensor (Figure 2).

Figure 2

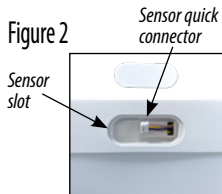

3. Clip sensor into sensor slot and snap into frame (Figure 3).

Figure 3



4. Restore power, your installation is complete.

STRIP FIXTURES INSTALLATION - SFS*

For strip fixture SFS* sensor installation, follow sensor box SFASB1 (sold separately) for instructions.


PANEL RETROFIT INSTALLATION - PRT*S

Installing the BCM01 sensor is quick and simple.

- Before installation, ***always turn off the power from main circuit first!***


1. To remove sensor cover, on front of panel press on center of the cover, and gently push out cover until it clears the frame (Figure 1).

Figure 1

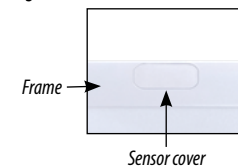

2. Pull wires with quick connector from driver and connect sensor (Figure 2).

Figure 2

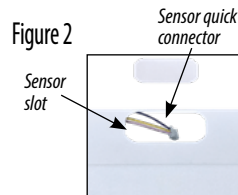

3. Clip sensor into sensor slot and snap into frame (Figure 3).

Figure 3



4. Restore power, your installation is complete.

Thank you for choosing

LITETRONICS®

6969 W. 73rd Street

Bedford Park, IL 60638

WWW.LITETRONICS.COM

CustomerService@Litetronics.com or 1-800-860-3392



The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us at 800-860-3392 or via email at customerservice@litetronics.com. To check for an updated version of these instructions, please visit www.litetronics.com.

Rev: 07/15/25