

# LITETRONICS®

## 3 Pin Photocontrol for Area Light and Flood Light 120-480V (OLAPC)

### Installation Instructions



### SAFETY INSTRUCTIONS AND WARNINGS

- When using electrical equipment, basic safety precautions should always be observed
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved
- Installation should only be conducted by a qualified electrician in accordance with NEC and any relevant local building codes.
- Be certain electrical power is OFF before and during installation and maintenance.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or sharp objects.

### WHAT COMES IN THE BOX

3 Pin Photocontrol

Installation Instructions

### INSTRUCTIONS

Before installation, carefully remove all parts from the packaging. Inspect product for defects due to shipping. Always turn off the power supply from main circuit breaker first!

### PHOTOCONTROL INSTALLATION

1. Turn off power.
2. Photocontrol should be installed on the back of light. Replace shorting cap with photocontrol. (Figure 1)
3. Make sure the installation is complete and secure before turning on the power.


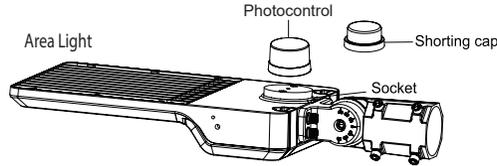


Figure 1

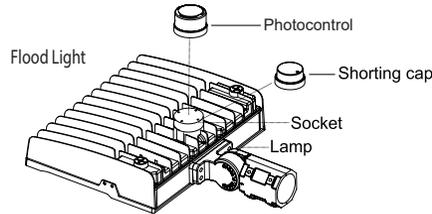

Thank you for choosing  
**LITETRONICS®**

6969 W. 73rd Street  
Bedford Park, IL 60638

WWW.LITETRONICS.COM

CustomerService@Litetronics.com or 1-800-860-3392



The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us at 800-860-3392 or via email at [customerservice@litetronics.com](mailto:customerservice@litetronics.com). To check for an updated version of these instructions, please visit [www.litetronics.com](http://www.litetronics.com).